



INSTRUCTIONS FOR:

NT-10 SMALL
NT-11 MEDIUM
NT-12 LARGE
NT-13 EXTRA LARGE

Congratulations on your purchase of **Zoo Med's REPTIBREEZE™** Open Air Black Aluminum Screen Cage. The following instructions will assist you with the proper assembly of your new habitat. Please read the following instructions carefully prior to assembly. If you have any questions regarding these instructions or the proper use of this item, please contact our customer service department at zoomed@zoomed.com or by calling (888) 496-6633 (US and Canada only). Customers in other countries, please call (805) 542-9988.

Your new **REPTIBREEZE™** Screen Cage includes the following components (see fig. 1):


- Six panels with screen mesh (top, back, right and left sides, upper main door, and lower door).
- One bottom panel (no screen mesh).
- Floor insert
- Four short screws for attaching hinges.
- Longer screws for attaching panels together (NT-10=16, NT-11=18, NT-12=20, NT-13=26).

Tools Required:

- Phillips screwdriver.


Assembly Tips:

- Prior to assembly, check to make sure that there are no missing pieces.
- Do not over-tighten the screws to avoid stripping the holes in the cage.
- For ease of assembly, assemble the panels in the order listed below. Be sure to match up the corresponding letters for each panel during assembly.


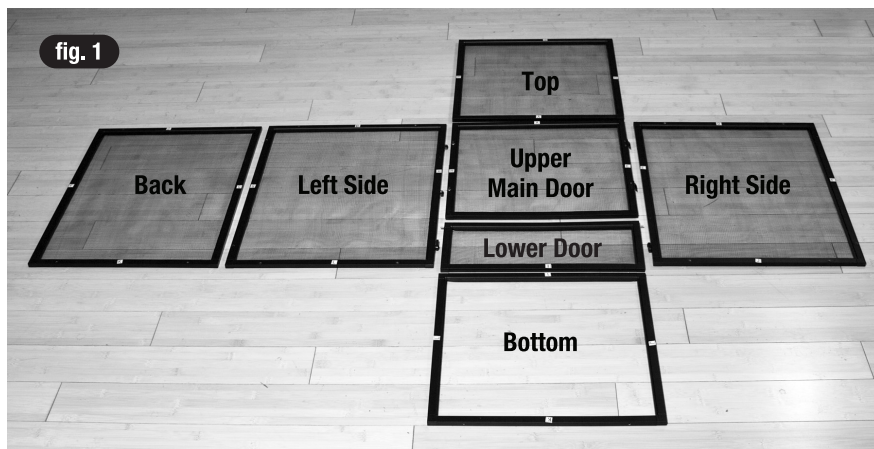


ASSEMBLY:

1. Attach **TOP PANEL** to **BACK PANEL** (see fig. 2): Place the Back panel on its long edge. Locate the edges labeled "**C**" on both the Back and Top panels. Attach the Top panel to the Back panel using two long screws. **Note:** The panel label stickers should face "out" of the cage for all screen panels (except the bottom panel) as shown in the photos.

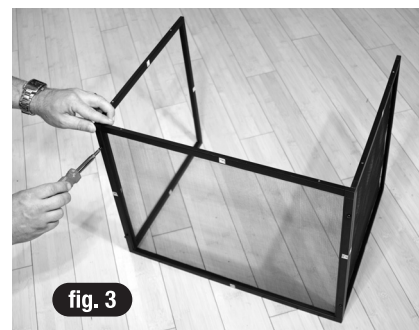


2. Attach **BOTTOM PANEL** to **BACK PANEL** (see fig. 3): Align the letters "**K**" on the Bottom and Back panels. Screw the panels together using long screws. **Note:** The panel label stickers on the Bottom Panel should face **INSIDE** the cage. Label stickers on all other panels face outside.

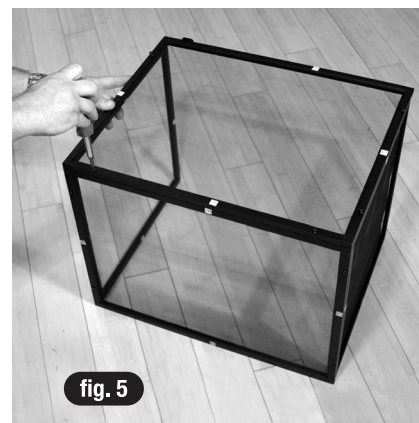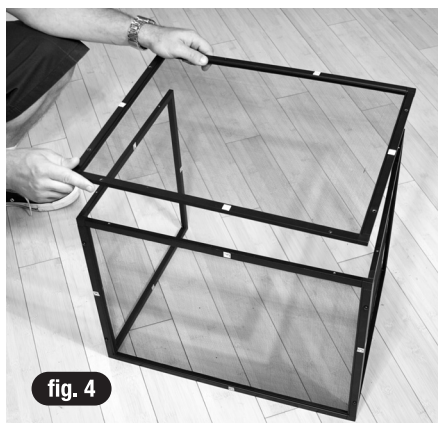


3. Attach the **RIGHT SIDE PANEL** (see fig. 4 and 5): Match letters "**D, F, and J**" on the Right Side panel to the corresponding letters on the Top, Back and Bottom panels. Use long screws to attach panels together.

ASSEMBLY (cont.):



4. Insert **LOWER DOOR** hinge pin and attach **LEFT SIDE PANEL** (see fig. 6 and 7): Turn the assembly over so that it is resting on the Right Side panel. Locate the hole for the Bottom Door hinge pin on the inside edge of the Right Side panel. Align the "I" label on the Bottom Door with the corresponding label on the Bottom panel (the sticker must face out). Insert the right Bottom Door hinge pin into the hole on the Right Side panel. While holding the Bottom Door in place, set the Left Side panel on the assembly, making sure that the left Bottom Door hinge pin goes into the hole in the inside edge of the Left Side panel. Attach the Left Side panel using long screws. Shut the Bottom Door and rotate latches on either side to lock.

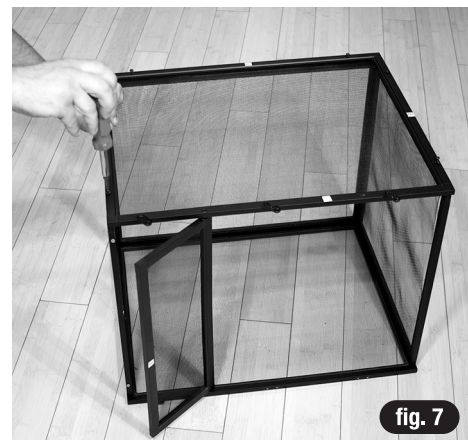

5. Attach **UPPER MAIN DOOR** (see fig. 8 and 9): Turn the assembly onto the back panel and set the Upper Main Door in place by matching the labels "A, H, and E." Use the four short screws to attach the hinges to the Right Side panel.

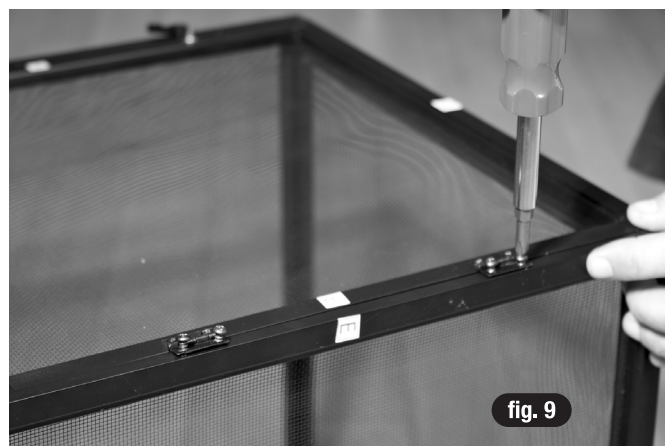

6. Insert **FLOOR PANEL** (see fig. 10, 11 and 12): At this time, you may remove the Panel Identification Labels. Place the terrarium upright and insert the Floor Panel through the Upper Main Door as shown. Shut the Upper Main Door and lock it by rotating the latches, making sure that the latch pegs on the door fit into the recesses in the latches. Your Repti Breeze is now assembled and ready to use!

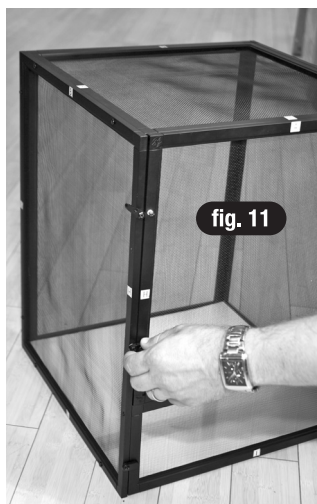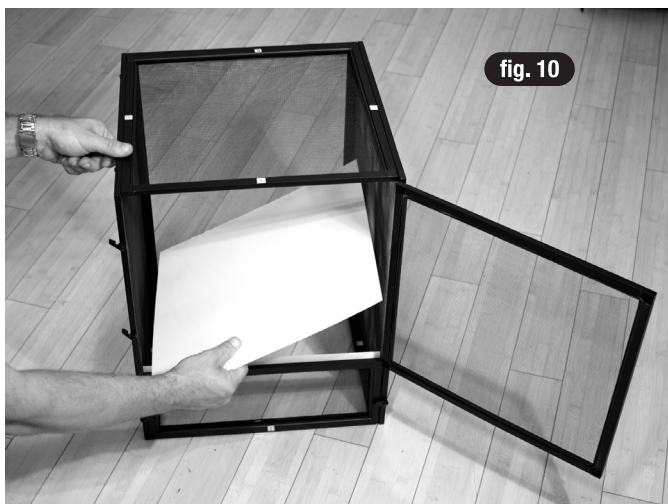

ZOO MED LABORATORIES, INC.

3650 Sacramento Dr.
San Luis Obispo, CA 93401 U.S.A.

Phone: 805-542-9988

E-mail: zoomed@zoomed.com

www.zoomed.com